


Installation Guide





SC100D - Drivers Side Chevy/GMC 2007 - Current, 2007-2018 & 2019 Chevy Legacy/GMC Limited

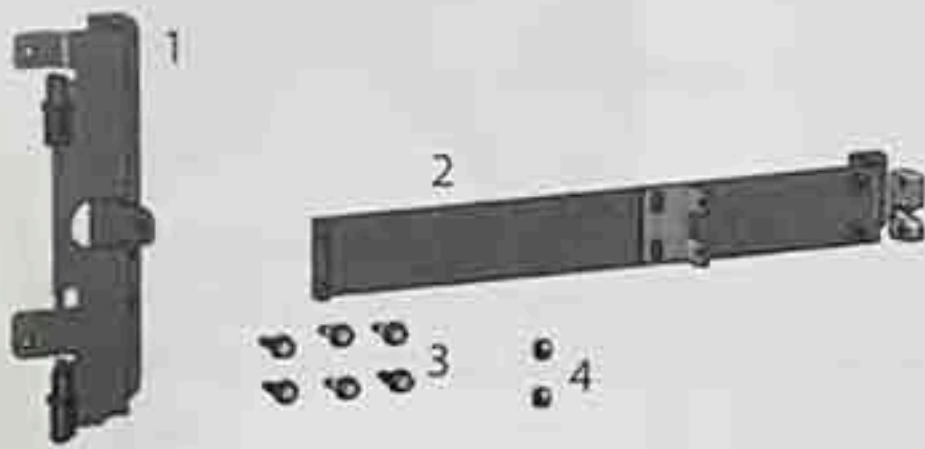


Hardware Included

1. Truck Bracket
2. Striker Bracket
3. Mounting Screws (qty 6)
4. Assembly Nuts (qty 2)

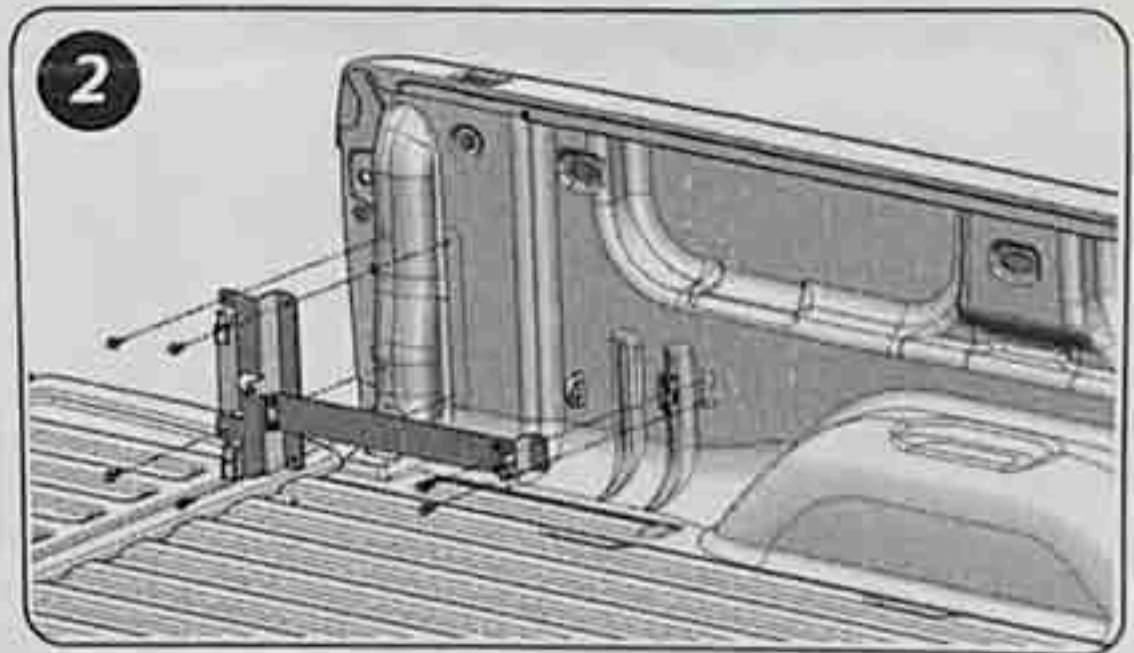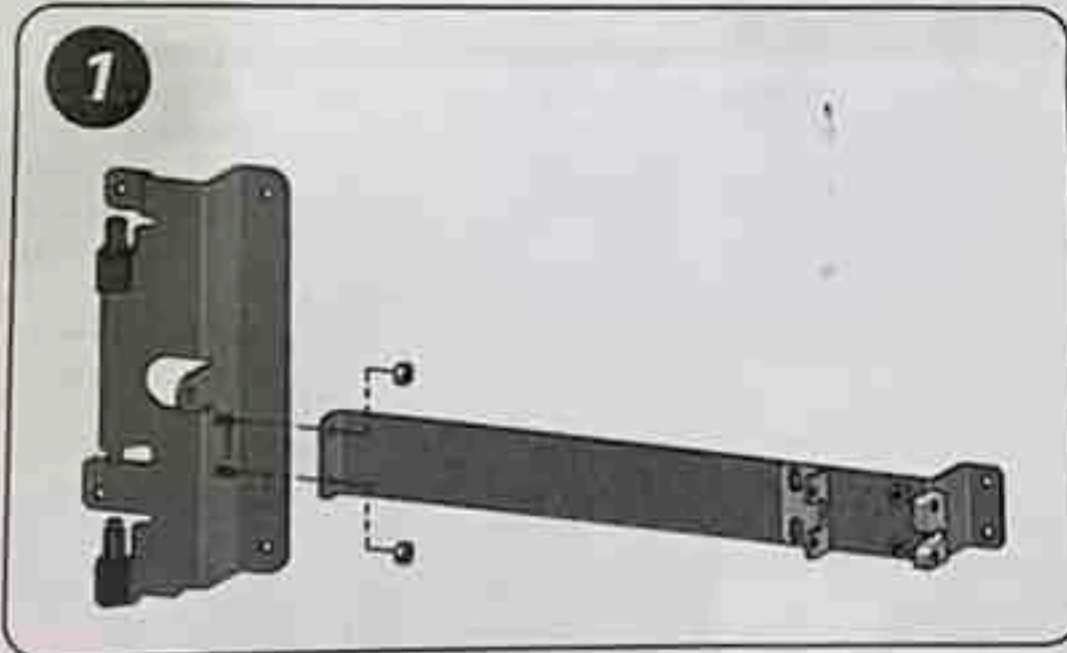

1. BRACKET ASSEMBLY - Attach the striker bracket to the truck bracket using the two (2) assembly nuts.

2. INSTALLING MOUNTING BRACKET ASSEMBLY - Position the bracket to the light well/wheel well area. It is not necessary to remove the tie down.

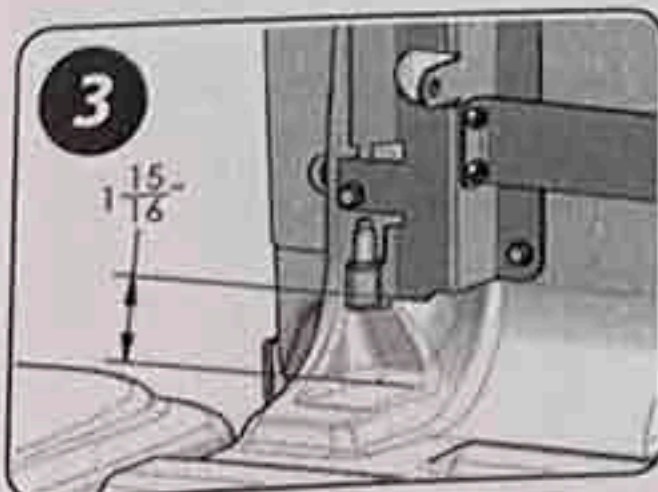

3. INSTALLING MOUNTING BRACKET ASSEMBLY (continued) Mount the bracket approximately $1 \frac{15}{16}$ " above the floor, according to the drawing. Using the six (6) self drilling screws provided, attach the bracket to the truck. Be careful not to overtighten and strip out the holes.